

# Channel Frame Installation



## ① Cut filter length to fit frame opening:

Count marks to length the frame opening and cut. (i.e. 10 ft wide frame opening, count 10 marks and cut on the 10th mark; i.e. 3 m wide frame opening, count 9 marks and 6 pleats, then cut).


To cut, slide knife under pleat (and polyester if cutting the HE). After knife is in position, firmly grasp the filter and lift knife.

## ② Gather filter:


Filter into a tight accordion for easy transport. Slide filter into frame, white side facing toward spray gun. Release.

## ③ Tuck first and last pleats:

Behind clips on each end of exhaust frame.

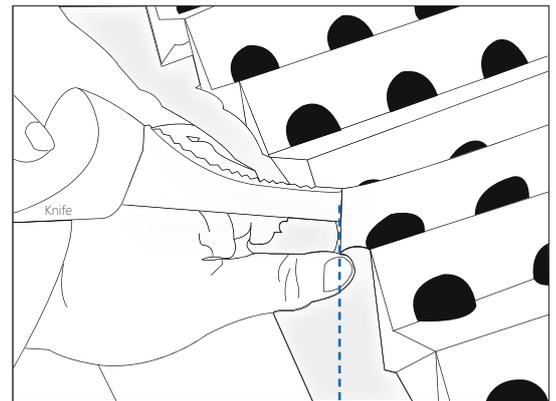

You will cut through two paper layers (plus synthetic material in the High range). Pinch the pleats on either side beneath the knife for additional control while cutting.

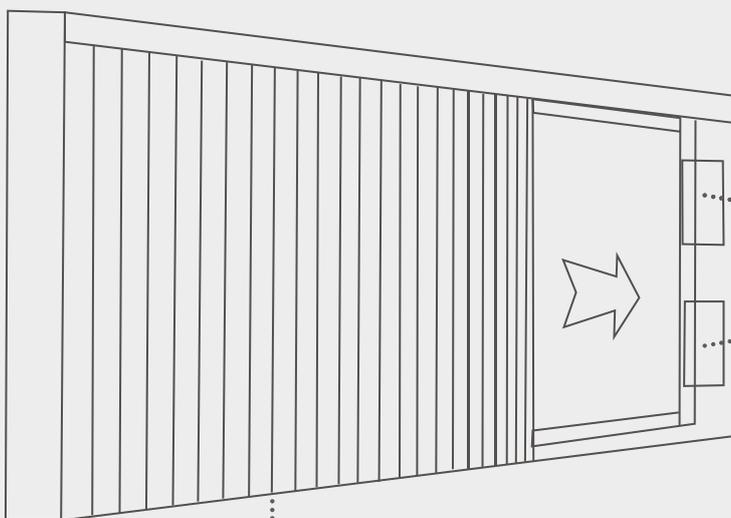

8 pleats / foot  
26 pleats / meter



Option A  
L-shape clip

The filter is held by the clip.  
This example is option A L-Shape clip



Option B  
S-shape clip

**Do not** over-extend the filter.  
Over-extension reduces arrestance efficiency and filter life.